



STEP 5 IF YOU HAVE AN "A"-MODEL, REMOVE KEEL TUBE AND BRACKETS. RE-INSTALL BRACKETS ON NEW B-MODEL TYPE KEEL TUBE. (PT# TB-6)

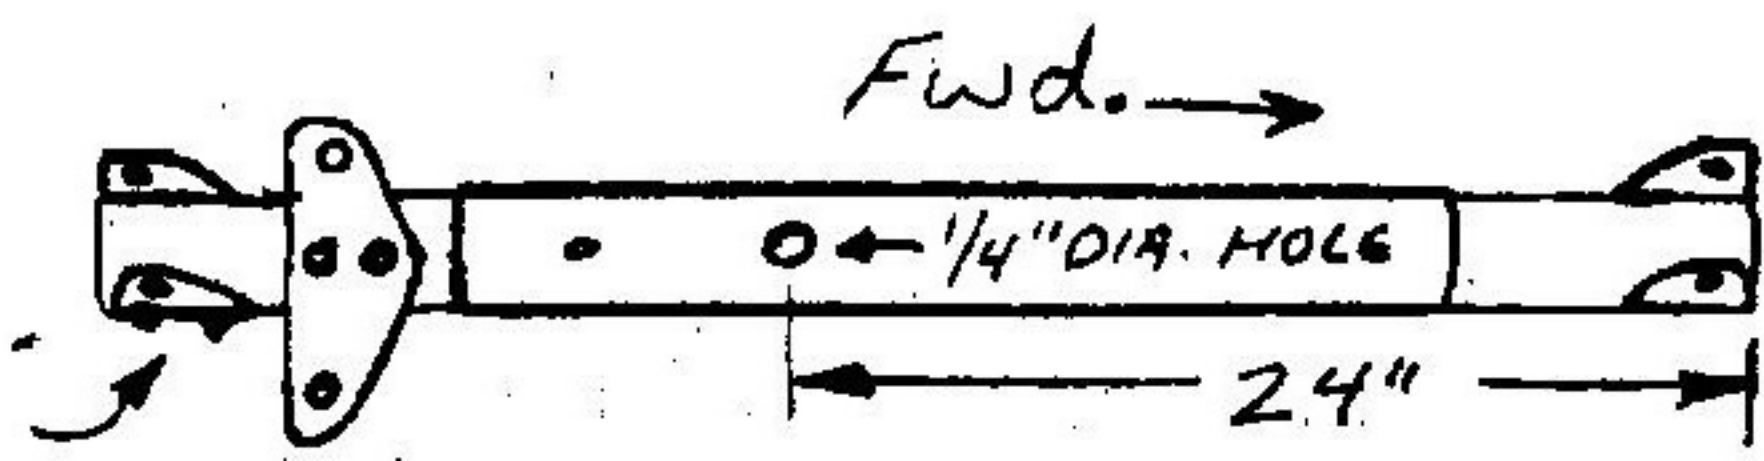

CAREFULLY NOTE POSITION OF HOLE IN SIDE OF KEEL. HOLE IS NEARER THE REAR THAN THE FRONT.

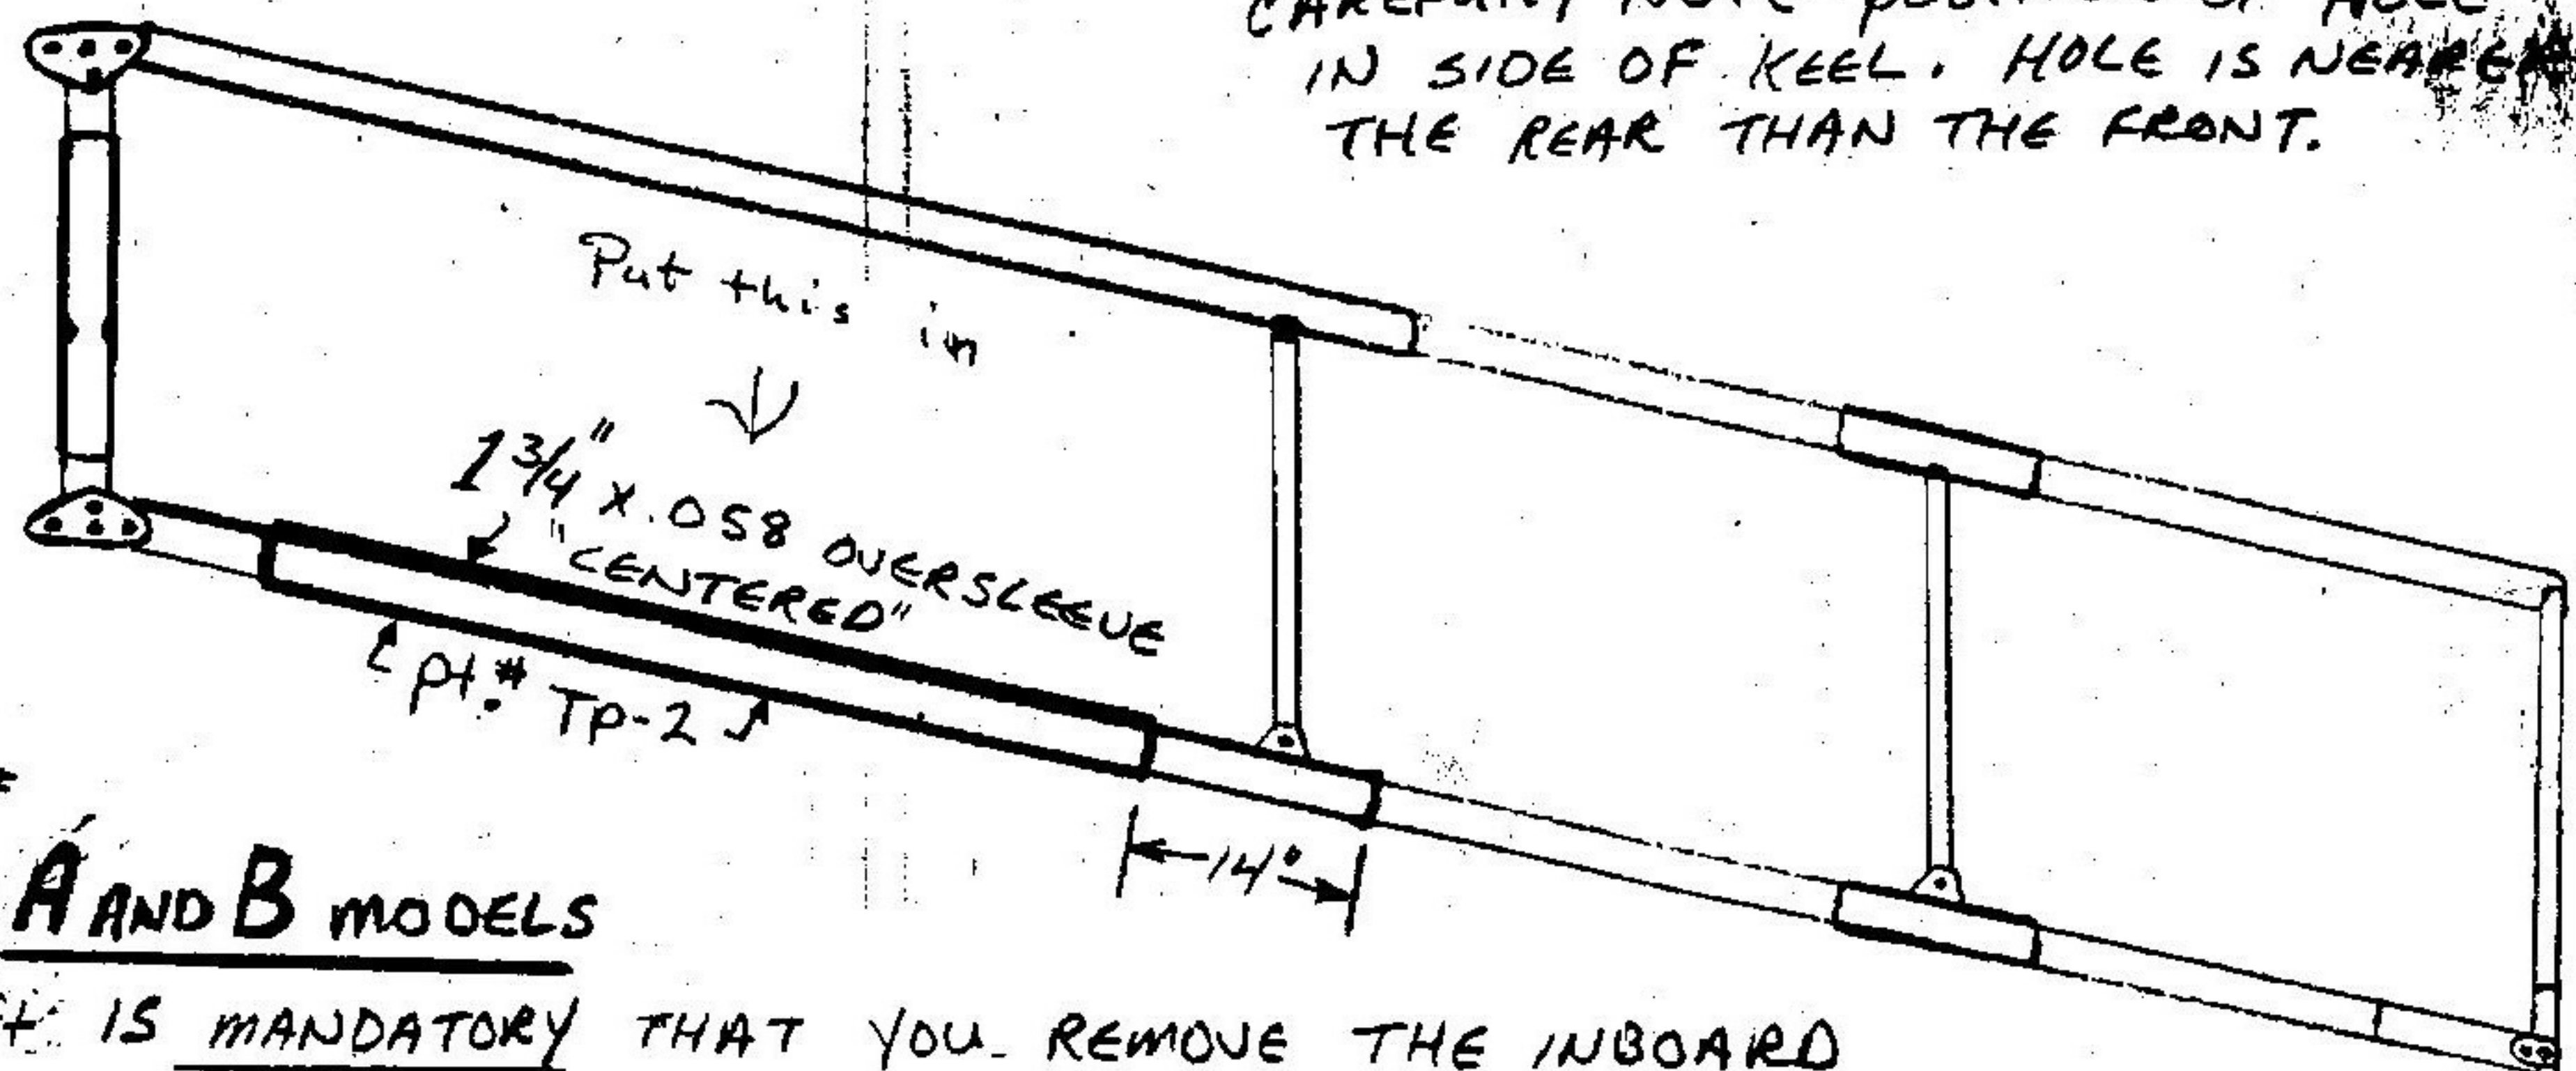

STEP 6 A AND B MODELS

IT IS MANDATORY THAT YOU REMOVE THE INBOARD REAR SPARS FROM THE WING AND INSTALL A 72" LONG x 1 3/4" OVERSLEEVE TO STRENGTHEN EACH WING. SLIDE SLEEVE ON OVER OUTBOARD END OF SPAR AND POSITION AS SHOWN. SECURE IN POSITION WITH TAPE ON ENDS OR I-POP RIVET NEAR ONE END. IT WILL HELP TO SPRAY A LITTLE WD-40 INSIDE SLEEVE PRIOR TO INSTALLATION. RE-ASSEMBLE WING SPARS AND KEEL TUBE AND SECURE WITH PROPER HARDWARE.

DRAWING # 3